



HotProfiler

True measurements of Bars & Tubes

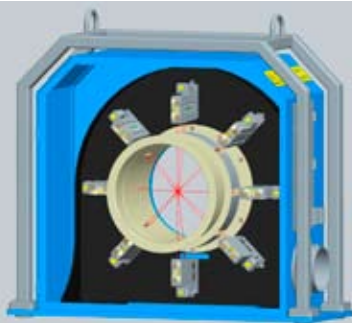

- *Diameter, ovality and shape measurement*
- *High accuracy*
- *Measure all surface parts*
- *Detection of material twist*
- *Non contact – low maintenance*
- *Oscillating frame*

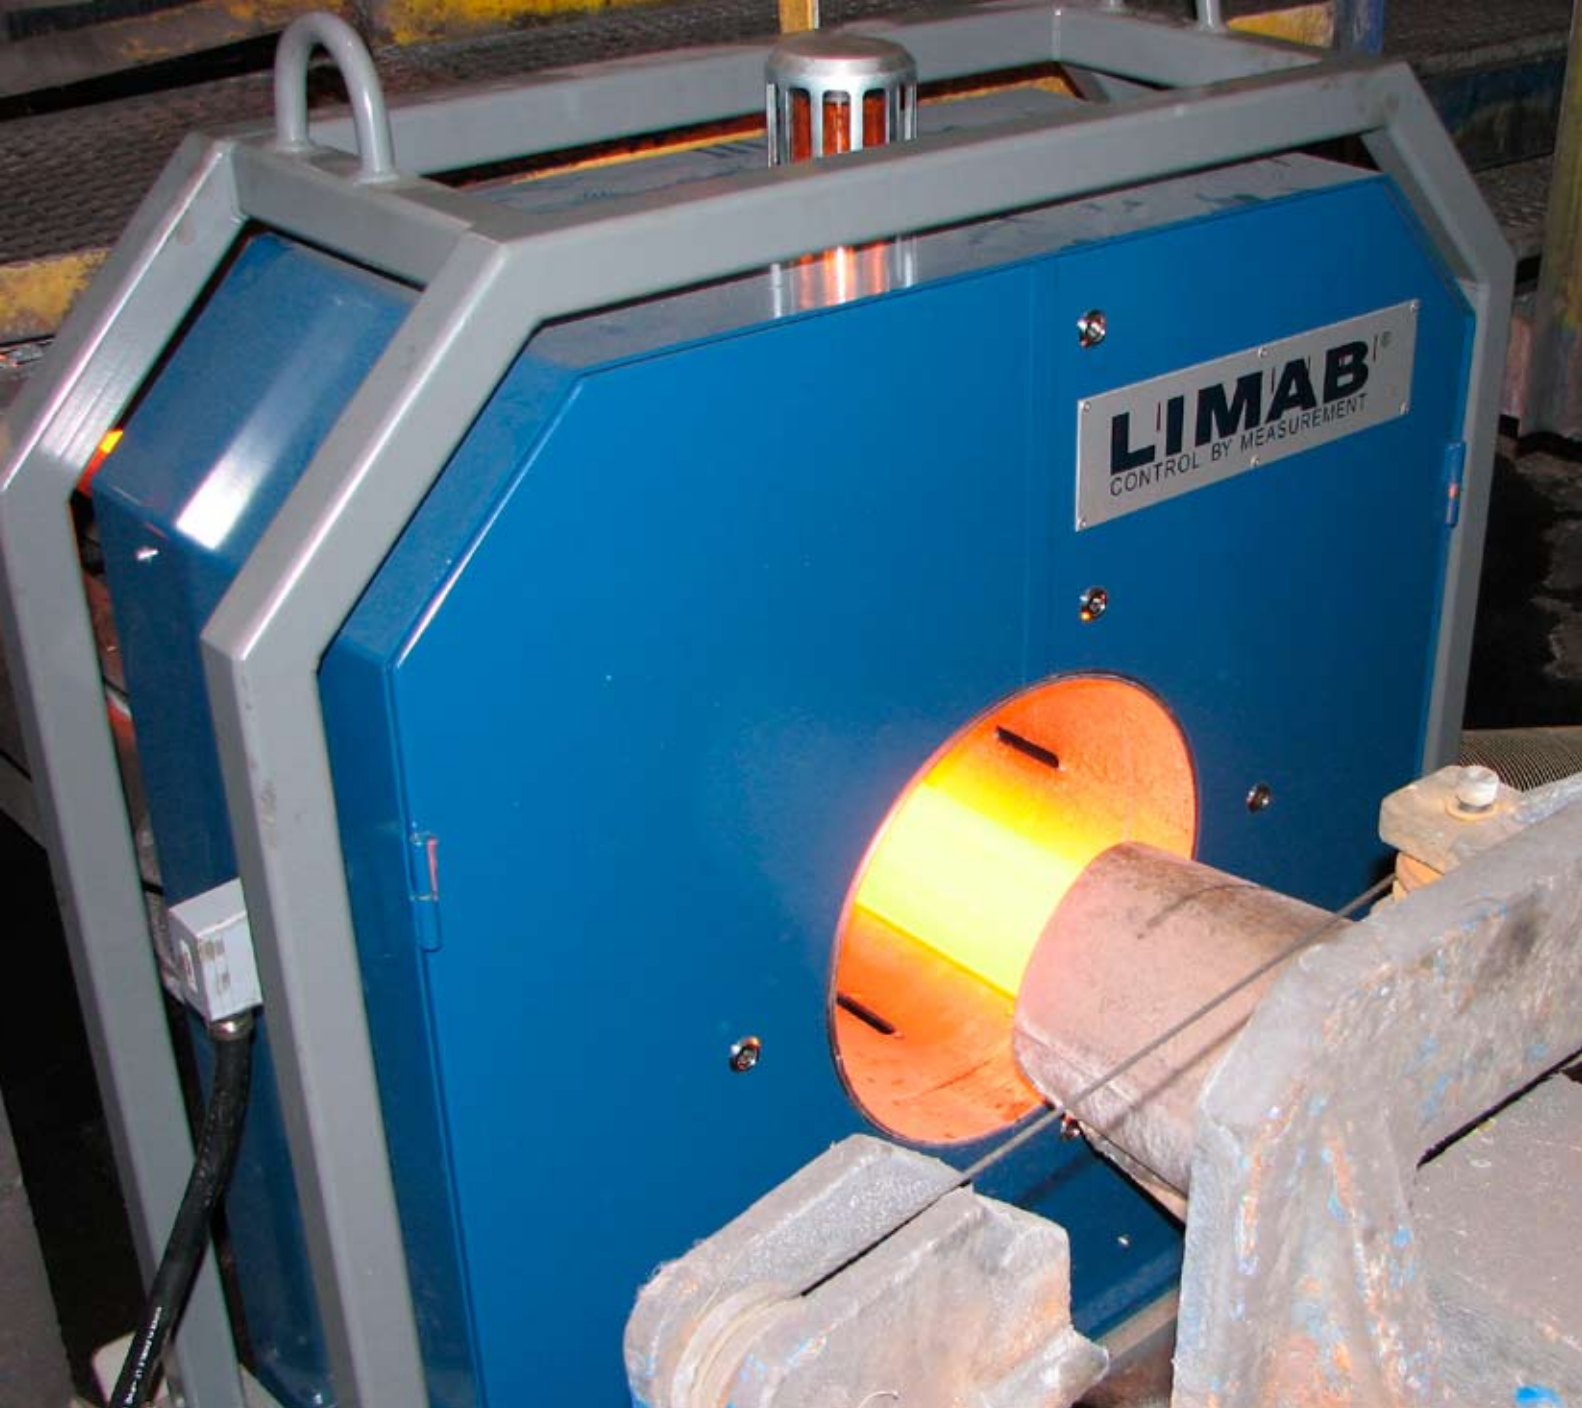

Design for harsh conditions

LIMAB has many years experience in manufacturing and supplying precision laser measuring systems for use in harsh environments found within steel plants. This knowledge is engineered into the HotProfiler to ensure high accuracy with very low maintenance. The system is supplied with a high performance air cooling system

to ensure complete reliability of operation in the hot and dirty conditions that are normal for hot bar and tube mills. The system will meet customer mechanical and electrical requirements for a perfect integration into any rolling mill.

Design for accuracy

High precision sensors are at the heart of the HotProfiler but to ensure an accurate system the design details of all the supporting components and equipment need to be carefully considered. This is where LIMAB's experience counts by paying close attention to the overall design. Furthermore, the HotProfiler uses our patented

algorithm that eliminates errors due to bar movement in the measurement field.

HotProfiler

System for accurate measurement of diameter and ovality of bars and tubes.

The HotProfiler uses up to 18 synchronized laser triangulation sensors mounted on a circular base plate with the lasers directed to the centre of the wheel. The mounting angle between the lasers is 20 degrees and the wheel oscillates through an arc of ± 150 degrees. Each laser precisely measures the distance to the hot bar. The software incorporates a patented algorithm ensuring that the movement of the bar in the measuring field does not affect the measuring accuracy. This method gives a high number of highly detailed cross sections which provides a much more detailed analysis of the shape than a typical 4 or 6 axis shadow based measuring system. Furthermore this principle detects all concave and convex surface defects. The system incorporates an automated self centring mechanism to adjust the height of the measuring wheel to suit the mill pass line. A pyrometer measures the material temperature for hot to cold conversion of the measurements. A large remote display shows key measured values.



Benefits

Cross section measurement with 18 sensors display the true shape and dimension of the bar or tube.

High measurement speed. 36.000 measurements per second, which gives a complete product shape information.

No missed surface area.

Laser based optical triangulation measurement ensures accurate and reliable measurement data.



Immediate product and process feedback. Allows for quick recognition and response to out of tolerance features.

Reduces costs caused by non-conforming production.

Mill setup time dramatically reduced between product changes

Easy to install in new or existing rolling line. The design permits easy relocation of the HotProfiler

Robust design with a minimum of maintenance

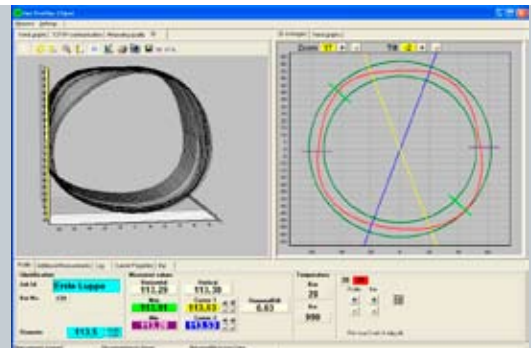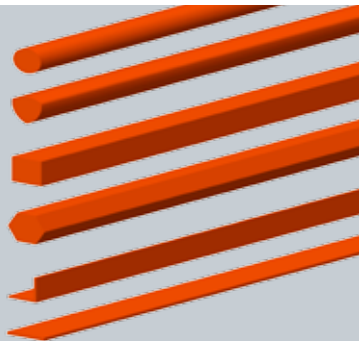

Applications

HotProfiler is an in-line non contact measuring system, providing high accuracy on hot or cold materials both small and large diameters. Max, min, average diameter, ovality, length waviness and length.

Typical bar mill installations:
Rounds, squares, rectangulars, flats, triangles, hexagonal, angles.
Also for Tubes and Pipes.

The software contains functions for:

- 2D, 3D and trend graph presentation
- Numerical presentation of key figures
- Tolerance and Alarm limits with on screen warnings
- System set-up
- Calibration
- Data logging
- Communication with level 2
- Remote service and supervision

Technical specifications

HotProfiler




Measurement objects	Hot/Cold bars & tubes
Product range	Round, square, rectangular, flat several models for different sizes; 5 – 700 mm
Sampling rate	36.000Hz
Profiles per second	5
Measurement system accuracy	from +/- 0,03mm @2s (depending on bar size)
Operating temperature	0-40°C

Cabinet and PC

Size	2000x600x600 mm
Protection class	IP54
Operating system	Windows XP
Processor	Core 2 Duo
Interfaces	TCP/IP, RS232C, Digital I/O
Laser sensor	PreciCura SR
Size	162x108x42 mm
Laser class	3b (hot application)
Protection class	IP65, NEMA 4X
Interfaces	CanBus, RS232, Analogue
Sensor mounting frame	1500x1500x600mm (typical)
Installation	Floor mounted
Encoder	Incremental, CAN-Bus
Lifting table	200 mm vertical movement

We reserve the right to introduce modifications without prior notice

Profile examples

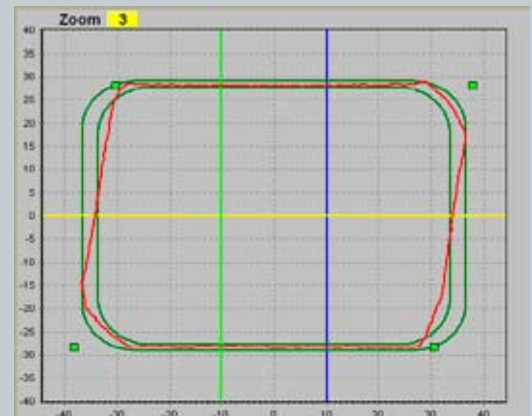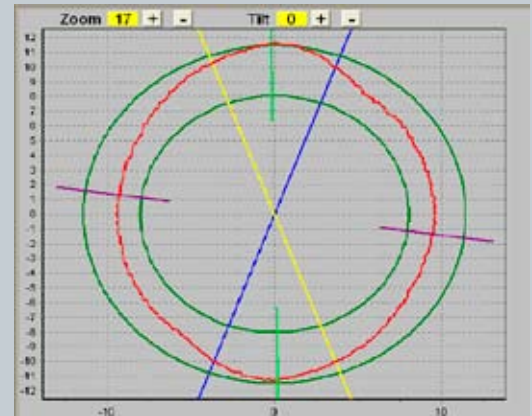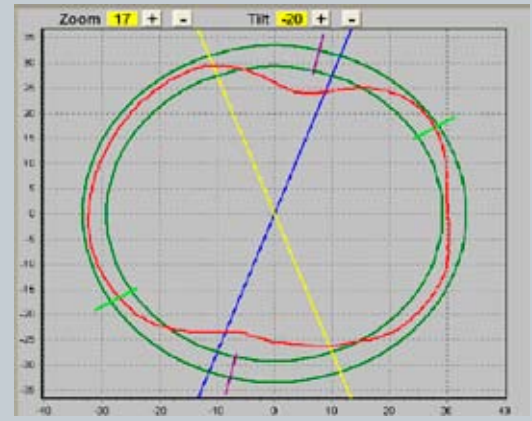

LIMAB were founded almost 30 years ago and have a long tradition of producing laser sensors and non contact measuring systems to meet the needs of the industry. Headquarters and manufacturing plant is located in Gothenburg, Sweden. LIMAB have regional offices in USA, UK, Germany and Finland and with distributors to cover other areas. Limab has over 15 years of experience in steel installations.



LIMAB North America Inc.
9301 Monroe Road, Suite B
Charlotte, NC 28270
USA
Tel: 001 (0) 704 321 0760
www.limab.com

LIMAB Oy
Henry Fordin Katu 5K
FIN 00150 HELSINKI
Finland
Tel: 00358 947 80 36 68
www.limab.fi

LIMAB GmbH
Mitterlangstr. 28
D-82178 Puchheim
Germany
Tel: 0049 (0) 89 84058320
www.limab.de

LIMAB UK Ltd
Unit 1J Chelston Business Park
Wellington
Somerset, TA21 9JQ UK
Tel: 0044 (0) 1823 668633
www.limab.co.uk

LIMAB®
CONTROL BY MEASUREMENT

Exportgatan 38 B
SE-422 46 HISINGS BACKA, Sweden
Phone +46 (0)31 - 58 44 00
Fax +46 (0)31 - 58 33 88
sales@limab.se - www.limab.com